


Moku:Pro

Quick Start Guide



Moku:Pro Layout

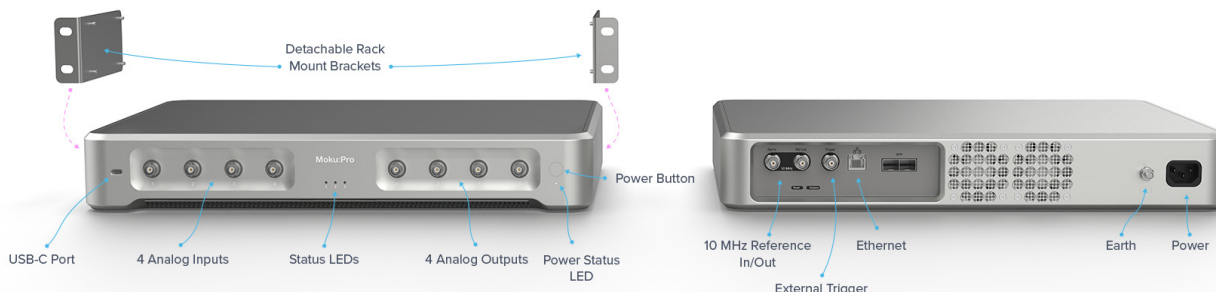

Powering On & Off

- ① Connect the power cable to the power port at the rear of the Moku:Pro.
- ② Press and hold the power button for one second until the power status LED turns on.
- ③ Once the power status LED turns solid white, your device is ready to use.
- ⊗ To power off your Moku:Pro, press and hold the power button for one second until the status LEDs turn solid orange and the UFO LEDs are off. Wait until the device turns off before unplugging the power cable.

Status LEDs

Moku:Pro's status LEDs indicate the current device mode.

LED	Device Status
LED 1 green	Access point ON
LED 1 blue	WiFi connected
LED 1 white	Access point ON WiFi connected
LED 2 blue	Ethernet connected
LED 3 blue	External 10 MHz reference locked

LED	Device Status
All LEDs solid orange	Power off
All LEDs cycling orange	Firmware update
All LEDs flashing red	Recovery mode

Installing The Moku: App

iPad App

- ① Open the App Store on your iPad.
- ② Search for the Moku: application and verify that the publisher is Liquid Instruments.
- ③ Download and Install Moku: App on your iPad.
- ④ Open the Moku: App and when prompted for permission to find and connect to devices on the local network, grant access to discover and connect to your Moku:Pro.

Desktop App

- ① Download the software from Liquid Instruments [Website](#) Resources > Windows & macOS Apps.
- ② **Windows:** Run the installer and follow the prompts to install the Moku: App.
Mac: Drag the icon to your Applications folder to install the application.

Connecting To Your Moku:Pro For The First Time

You can connect to your Moku:Pro for the first time via its Wireless Access Point or Ethernet.

Option 1: Wireless Access Point

On your iPad or computer, join the WiFi network called “*MokuPro-012345*”, where “*012345*” is the 6-digit serial number of your Moku:Pro printed on the bottom of the device. The default password is printed alongside the serial number, labelled as “WiFi password”.

Option 2: Ethernet

Connect your Moku:Pro to a local wired network (e.g. a router) via an Ethernet cable. Make sure your iPad or computer is connected to the same network.

Option 3: USB (Desktop only)

Connect your Moku:Pro to the computer via a USB-C cable.

Getting Started With The Moku

Once you have connected your Moku:Pro to your iPad or computer, you can start using your device.

- ① Launch the Moku: App.
- ② Moku:Pro devices that are connected to the same network as your iPad or computer will show up on the “*Select your device*” screen.
- ③ Select your Moku:Pro to start using your device. The default name of your Moku:Pro is “*Moku 012345*” where “*012345*” is the 6-digit serial number printed on the bottom of the device.
- ④ On the “*Select your instrument*” menu, select an instrument to deploy to your Moku:Pro.
- ⑤ To discover how to use each instrument, refer to the “*Accessing Instrument Manuals*” section below.

Configuring Your Moku:Pro To Join An Existing Wireless Network

Once you have connected to your Moku:Pro, you can have it join an existing wireless network.

- ① Launch the Moku: App.
- ② **iPad App:** Tap the icon of your Moku:Pro on the “*Select your device*” screen, then tap the Settings gear at the bottom left corner of the screen to configure the Moku:Pro’s settings.
Desktop App: Right click on the icon of your Moku:Pro on the “*Select your device*” screen, then select “*Configure device*”
- ③ Switch to the WiFi tab, select “*Join a WiFi network*” and type in the name of the WiFi network you would like to connect to. You will be prompted to enter a password for that network if required.
- ④ Connect your iPad to the same WiFi network. The iPad will search for Moku hardware on the same network.

Accessing Instrument Manuals

Instrument manuals for each instrument are available on [Liquid Instruments website](https://www.liquidinstruments.com/resources/supporting-material/product-documentation).

To access these manuals, visit:

<https://www.liquidinstruments.com/resources/supporting-material/product-documentation>



Factory Resetting Moku:Pro

Moku:Pro must be plugged in and powered on to perform a Factory Reset. You can return your Moku:Pro to its default network and configuration settings by pressing the Factory Reset button at the back of the device with a paper clip or small object for two seconds. The Power LED will turn off once the unit reinitialization is completed. You can now power on your Moku:Pro by pressing and holding down the power button. It will restart in Wireless Access Point mode with Ethernet enabled.