

DFB Quantum Cascade Lasers (QCL): 6000 nm - 11000 nm

WAVELENGTH

760–830 nm

830–920 nm

920–1100 nm

1100–1300 nm

1300–1650 nm

1650–1850 nm

1850–2200 nm

2200–2600 nm

2600–2900 nm

2800–4000 nm

4000–4600 nm

4600–5300 nm

5300–5800 nm



5800–6500 nm

6000–11000 nm

nanoplus Distributed Feedback Lasers (**DFB**) are specifically designed for high-precision gas detection using tunable diode laser absorption spectroscopy (**TDLAS**). Our devices operate **reliably** in more than 50,000 installations worldwide. For 25 years nanoplus has set the standard for DFB laser technology and is the only manufacturer routinely providing DFB lasers at **any wavelength**.

Key features:

- MONOMODE
- CONTINUOUS WAVE
- ROOM TEMPERATURE
- MODE HOP FREE TUNING

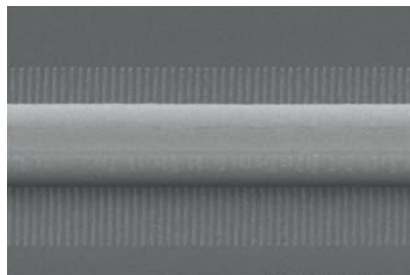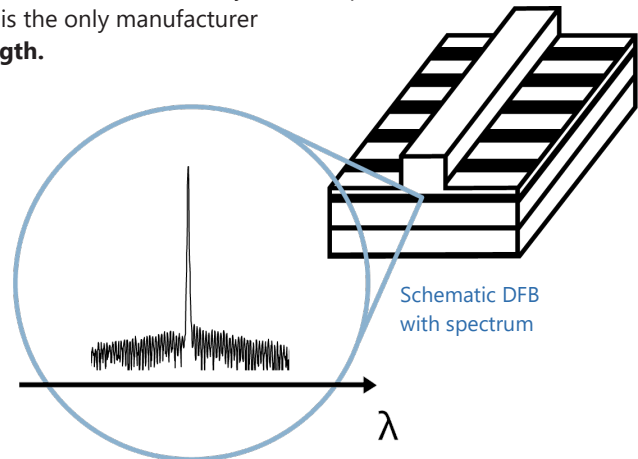

Overgrowth-free DFB device processing

Any **custom wavelength** is possible: You tell us what you need and we deliver it. With our patented DFB technology we design any wavelength **between 760 nm and 14 μm** .

Our excellent **spectral purity** is characterized by a large side mode suppression ratio (**SMSR**) of **> 35 dB**, giving your system a low signal to noise ratio against crossinterference.

A **narrow linewidth below 3 MHz** guarantees ultra-precise scanning of the absorption line feature. The **high output power** of **several mW** yields a stronger signal and increases your measurement precision.

Fast and wide wavelength tuning is required for in situ systems. Most customers use a scan rate of 10 kHz and benefit from our very **large tuning coefficient**.


“Do not change your ideas, let us deliver a laser that fits your application.”

We offer **various packaging options**, e.g. several free space housings including TEC and NTC, fiber coupling, **collimation** and **custom designs**. What do you require?

If you require **custom specifications**, please contact us. Nearly 80 % of our devices are more or less customer-specific. As nanoplus is a **fully vertically integrated company**, we control the entire process chain from design to packaging.




High-Heatload (HHL)
mount incl. collimation




LASER 2000

Typical Specifications: 6000 nm - 11000 nm

This data sheet reports performance data of a **sample DFB QCL at 7970 nm**, which is representative for the entire wavelength range.

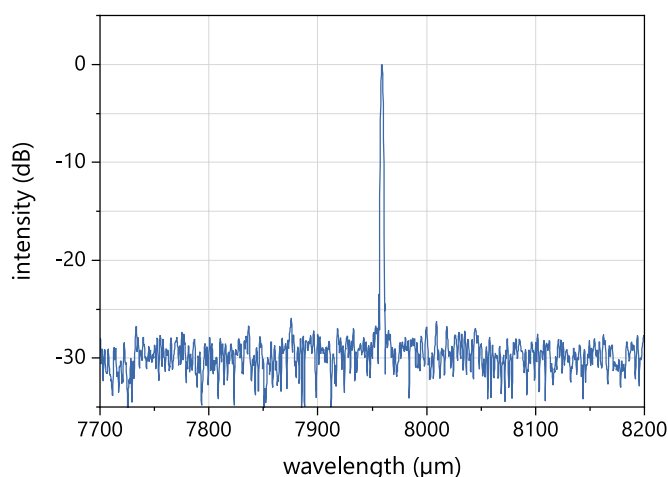

Typical room temperature cw spectrum
of a nanoplus DFB QCL at 7970 nm

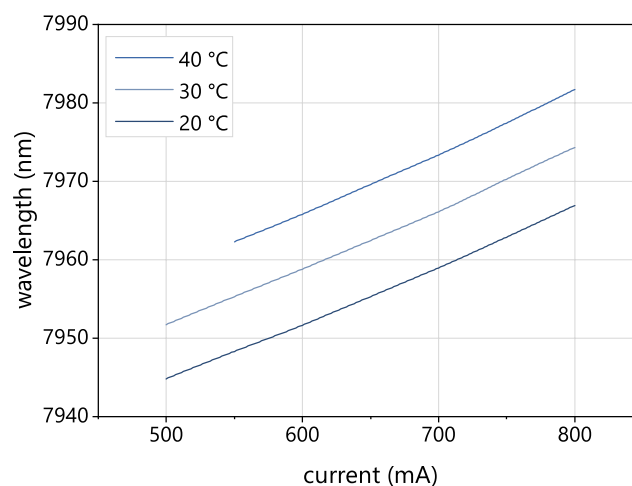

Typical mode hop free tuning of a nanoplus DFB
QCL at 7970 nm by current and temperature

electro-optical characteristics	symbol	unit	min.	typ	max.
operating wavelength (at T_{op} , I_{op})	λ_{op}	nm	Please specify to 0.1 nm.		
optical output power (at λ_{op})	P_{op}	mW	10	20	
operating current	I_{op}	mA		500	1500
operating voltage	V_{op}	V		9	15
threshold current	I_{th}	mA		400	
side mode suppression ratio	SMSR	dB		> 35	
current tuning coefficient	C_I	nm / mA	0.05	0.1	0.15
temperature tuning coefficient	C_T	nm / K		0.7	
operating chip temperature	T_{op}	°C	-10	20	45
operating case temperature*	T_c	°C	10	20	30
storage temperature*	T_s	°C	0	20	50

* non-condensing

packaging

High-Heatload Mount (HHL) incl. collimation

Other packaging options may be discussed on request.