


laservision

laser safety spectacle R17T1K15




Article number: R17T1K151001
GTIN: 4050369023703
Unit: piece
Weight incl. packaging: 0,50 kg
Weight excl. packaging: 0,16 kg

Color view

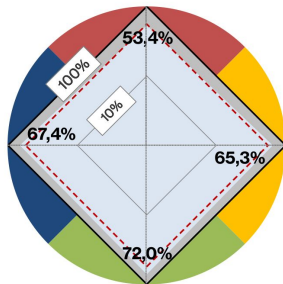

Transmission der Signalfarben nach DIN EN 172 //
transmission of signal colours acc. to EN 172

Filter curve

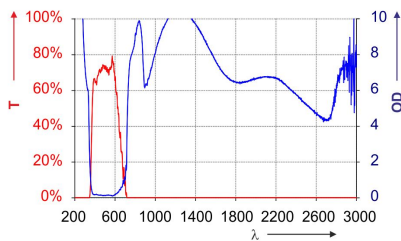

Transmissions- und OD-Kurve //
transmission and OD curve

Highlights

- Protection levels certified according EN 207
- Applications for Diode-, IR-fiber-, -disc-, Nd:YAG and CO2-laser
- Coated, absorbing mineral glass
- Unlimited colour view and very high VLT
- 3 frame styles available: [R01](#), [R14](#) and [R17](#)

The laservision laser safety goggle R17.T1K15.1001 provides a broadband, high laser safety for YAG and fiber lasers within the NIR and IR spectral area (780-11,500nm). This frame can be combined with the RX-insert for correction glasses. The laser safety goggle comes with a metal box, which can also be used as a storage box.

COATING:	Interference Coating (PVD)
FILTER CURVATURE:	Flat filter
PROTECTION CLASS / NORM:	EN 207 full protection
FRAME TYPE:	Spectacle with Rx insert option
PROPERTIES:	M-protection rating Neutral glass lamination
FRAME:	R17
FILTER:	T1K15
FILTER COLOUR:	Light grey
COLOUR RECOGNITION:	Excellent
FILTER THICKNESS:	ca. 5mm
FILTER MATERIAL:	Coated glass
FILTER TECHNOLOGY:	Absorption filter Reflection filter
PROTECTION RANGE:	Coated filter Infrared near infrared
VISUAL BRIGHTNESS:	Very good
VLT (APPROX.):	65%

laser safety spectacle R17T1K15

WAVELENGTH	OD	OPERATING MODE / TESTED PROTECTION LEVEL
780 - 850	(OD6+)	DIRM LB6
>850 - 900	(OD3+)	DIRM LB3
>900 - 950	(OD4+)	DIRM LB4
>950 - <980	(OD5+)	DIRM LB5
980 - <1030	(OD7+)	D LB6 + IRM LB7
1030 - 1400	(OD8+)	D LB6 + IRM LB8
>1400 - 3000	(OD4+)	DIR LB4 + M LB4Y
>3000 - 11500	(OD4+)	DI LB4 + R LB2