## Mid-Infrared LEDs (MIR LED): 4000 nm - 5300 nm

nanoplus **MIR LEDs** are specially designed and characterized to fit your requirements. For more than 20 years, nanoplus has been manufacturing Distributed Feedback and Fabry-Pérot Lasers with excellent performance. Our devices operate **reliably** in more than 30,000 installations worldwide.

nanoplus **MIR LEDs** are a broadband, incoherent and cost-effective alternative to lasers for e.g. many gas sensing applications in industry and research.

#### **Key features:**

- LOW POWER CONSUMPTION
- CW OPERATION
- BROADBAND
- INCOHERENT

Schematic MIR LED with spectrum

λ

Nanosystems and Technologies GmbH

nanopus

Any **custom wavelength** is possible: You tell us what you need and we deliver it. With our outstanding technology we design any wavelength **between 2800 nm and 6500 nm** with an accuracy of +/- 100 nm.

nanoplus MIR LEDs are the perfect light source **for mobile analyzers**, as they **consume little power**.

You can use our MIR LEDs in true continuous wave operation at room temperature.

The MIR LEDs' **output power** of **> 1 mW** leads to a strong signal and increases your measurement precision.

We offer various packaging options, with or without TEC. You tell us what you need!

**Long-term stability** is what our customers really want! Even in **harsh environments** nanoplus devices perform excellently – low maintenance warranted.

### "Do not change your ideas, let us deliver a MIR LED that fits your application."

If you require **custom specifications**, please contact us. Nearly 80 % of our devices are more or less customerspecific. As nanoplus is a **fully vertically integrated company**, we control the whole process chain from design to packaging. Both nanoplus production facilities are based in **Germany**.

To guarantee consistent product quality we apply a strict and **ISO certified quality management system** at all levels.

Our sales and R&D teams have long-standing experience in developing lasers. They will advise you in your design and realization phase as well as after-sales: We make market leaders!

nanoplus MIR LED on ceramic submount



WAVELENGTH

2800–4000 nm

4000-5300 nm

5300–6500 nm

WAVELENGTH

3400 nm

4300 nm


5200 nm


тор



# Typical Specifications: 4000 nm - 5300 nm

This data sheet reports performance data of a **sample MIR LED at 4.3 \mum**, which is representative for the entire wavelength range.

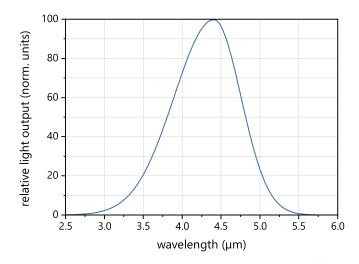

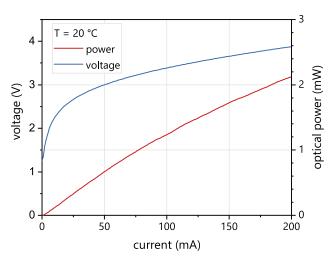

Typical room temperature cw spectrum of a nanoplus MIR LED at 4.3 µm

Typical PI and VI curve of a nanoplus MIR LED at 4.3  $\mu m$ 

electro-optical characteristics	symbol	unit	min.	typ	max.
operating wavelength* (at $T_{_{\mathrm{op}}}$ , $I_{_{\mathrm{op}}}$ )	$\lambda_{_{op}}$	μm	4.2	4.3	4.4
spectral bandwidth (FWHM)	Δλ	μm		0.8	
optical cw output power** (at $\lambda_{_{op}})$	$P_{op}$	mW	1	1.5	
operating current	I <sub>op</sub>	mA	150	200	
operating voltage	V <sub>op</sub>	V		4	
operating case temperature***	T <sub>op</sub>	°C	-10		50
storage temperature***	Τ <sub>s</sub>	°C	-10		70

\* ~ 20 nm peak-change per 10°C temperature-change

power dissipation 1W [heatsink required]

Pulsed operation for low power consumption is possible. Other operating temperatures are available on request.

\*\*\* non condensing

\*\*

### packaging options

ceramic submount

#### PCB mounted

Other packaging options may be discussed on request.

Technical drawings & accessories are available at: https://nanoplus.com/packaging-options

Please contact <u>sales@nanoplus.com</u> for customized specifications, quotes and further questions. Visit our website for technical notes, application samples or literature referrals.

nanoplus Nanosystems and Technologies GmbH, www.nanoplus.com, phone: +49 (0) 3693 50 5000-0, email: sales@nanoplus.com <sup>©</sup>copyright nanoplus Nanosystems and Technologies GmbH 2021, all rights reserved. Technical data is subject to change without notice.